

# GERMANICA

## RECHARGEABLE HANDHELD FAN

KF4R



## INSTRUCTION MANUAL

Please read this manual carefully before using, and keep it for future reference.



# CONTENTS

General Safety	4
Before first use	6
Product Overview	7
Getting Started	8
Customer Support	12

# GENERAL SAFETY

Read this manual thoroughly before you start using the Fan.

Store this manual, the completed warranty card, your receipt and the product packaging.

The safety precautions instructions reduces the risk of fire, electric shock and injury when correctly complied to.

Please follow all instructions and take notice of all warnings.

## IMPORTANT INFORMATION

- Do not expose this product to rain or moisture as it may result in fire.
  - Do not temper or change or modify the product in any way.
  - Only use Accessories outlined and recommended by the manufacturer.
  - Please do not expose the product to splashing or water contact
- 
- The apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the product. Dry location use only.
  - No naked flame source, such as candles, should be placed on the product.
  - Do not use this fan with an extension cord, power adaptors or external timers.
  - This product is not designed for commercial, industrial or outdoor use.
  - Do not leave the fan unattended during use.
  - This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
  - **AIRFLOW** - Make sure nothing is obstructing or blocking the airflow outlet at the front of the fan, and the airflow intake which is the back of the fan.
  - Do not insert an foreign objects into the fan grill opening as this may cause damage to the appliance and lead to electric shock and/or a fire hazard.

# GENERAL SAFETY (CONT.)

- If you notice any unusual odors or smoke around the unit, immediately disconnect the unit from the immediately switch off the product and contact the service center. Failure to do so may result in fire.
- When not using the unit for long periods of time or when you are moving the unit. Please switch off the appliance.
- Please beware that Dust could accumulate over time on the unit and cause it to generate heat and or deteriorate insulation, which in turn may result in an electrical fire.
- To maintain the product do not use any chemical or cleaning agent or wet cloth, please only ensure to utilize a dry cloth to wipe it down from marks or dust and only after unplugging the product from the power socket.
- Please ensure to contact our call center for any repair or service required for the products.

## **Please make sure upon positioning this product, the place is:**

- Not wet or damp and Well ventilated.
- Placed on a stable surface to avoid product from tipping over.
- Away from direct sunlight or heaters.
- Away from splashes or food.
- Protected from excessive dust or grease.
- Do not place this equipment in a confined space such as a bookcase or similar unit. Allow 20cm above and 5cm spacing on both sides for proper ventilation.
- Do not place the Product near heat sources such as radiators, stoves or other audio visual equipment that produce heat.
- Do not place small metallic objects near the unit.
- Do not use or store flammable or combustible materials near the unit. Doing so may result in fire or explosion. Do not place any naked flame sources, such as lit candles, cigarettes or incense sticks on top of the product.

# GENERAL SAFETY (CONT.)

## **Before first use**

- Unpack the fan and accessories and ensure all parts of the product are undamaged and in good working order.
- Plastic wrapping can be a suffocation hazard for babies and young children, so ensure all packaging materials are out of their reach and disposed of safely.
- Ensure the fan is not exposed to direct sunlight or placed near a heater or other heat source.

# PRODUCT OVERVIEW




1. Grill
2. Fan blades
3. Indicator Light
4. Power / Speed button
5. Desk Stand
6. USB Charging cord

# Getting Started

## How to use

1. Hold the fan and press the **POWER/SPEED** button to switch on the fan and power it a **LOW SPEED**.  
The indicator light will be BLUE colour.  
**NOTE:** Low Speed fan will allow the fan to run for longer without charge.
2. To increase fan speed, press the **POWER/SPEED** button again to go to **MEDIUM SPEED**, then again to reach **MAXIMUM SPEED** as indicated below.  
When Fan is off, Blue indicator light will turn off.

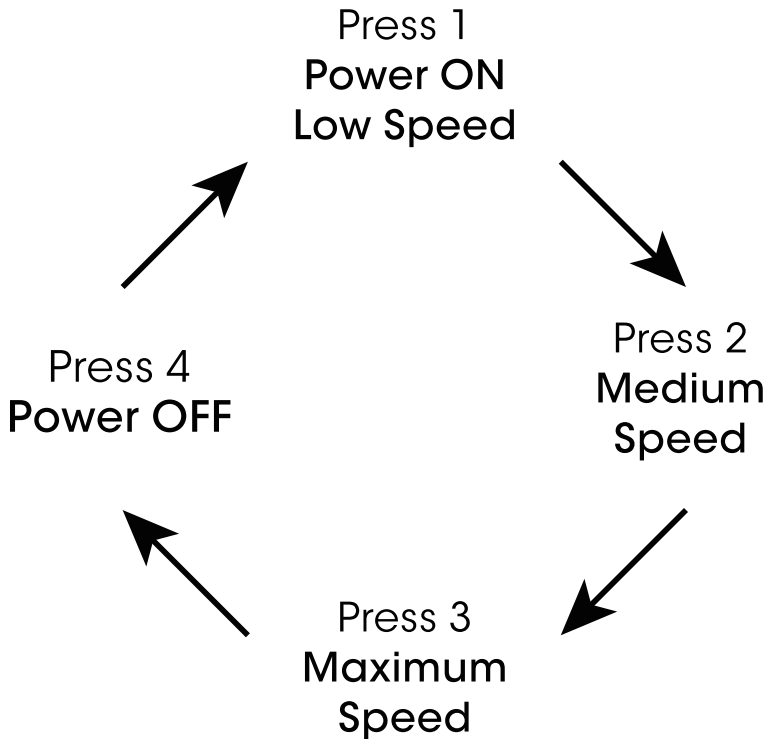



# Getting Started (Cont.)

## CHARGING

1. Using the **Micro USB** cable provided, plug the **MICRO USB** end into the fan, and the **USB** end into a powered source such as a Laptop/pc **USB** port or power adaptor with a USB port. The fan can last:  
Up to 2 Hours at **Maximum Speed**.  
Up to 4 hours on **LOW SPEED**.

**RED** - charged

**Flashing RED** - Low battery / Recharging

**BLUE** - In Use.

## HANDS-FREE

1. You can insert the Fan into the **DESK STAND** provided to have a freestanding fan on your desk.
2. Once installed, press the **POWER/SPEED** button to set desired fan speed.



This page is left  
blank intentionally.

This page is left  
blank intentionally.



**CUSTOMER HELPLINE:**

[info@ayonz.com](mailto:info@ayonz.com)

**DISTRIBUTED BY:**

Ayonz Pty Ltd